

1		2		3		4		5		
A										
B										

Notebook PC
Quick start guide
CO100-G1

1. Product schematic:



Crius CO100-G1-User Guide

2. Instructions for use:

- When the computer is connected to the AC power adapter or the battery power is higher than the minimum requirement, press the power button short to start the computer;
- Press the power key briefly during use to suspend/resume/shut down your computer.

2.1 Function keys:

This product has a total of 12 function keys-F1-F12;
These function keys are assigned different application functions, please refer to the following instructions to use;
Fn +F1: Turn airplane mode on or off
Fn +F2: Turn mute on or off
Fn +F3: Decrease volume
Fn +F4: Increase volume
Fn +F5: Decrease brightness
Fn +F6: Increase brightness
Fn +F7: Remote projection screen
Fn +F8: Always on display
Fn +F9: Turn the touchpad on or off
Fn +F10: Projection
Fn +F11: Lock roll
Fn +F12: Delete
Fn +ESC: The system enters sleep mode

2.2 Power supply and charging:

- This product can use lithium battery or AC power adapter;
- After unpacking, please connect the AC power adapter to charge the computer first;
- Lithium batteries do not have a "memory effect", so you do not have to wait until the battery is completely used up before charging;
- When charging the battery, if you are still using the laptop, the charging time will be longer;
- If you want to charge the battery quickly, put the computer on hold, or turn off the laptop while charging;
- In order to extend the life of lithium batteries, it will be charged when the power < 95%, and not charged when the power ≥ 95%;
- When the battery is low, the screen will appear prompt information, the battery will continue to work until the power is too low and hang, at this time the data may not be saved, please charge in time, after connecting to the adapter, you can use the computer normally;
- Please use the original power adapter to avoid damage to the computer;
- Batteries are toxic and harmful substances, please recycle the battery according to environmental protection regulations, do not dispose of the battery at will to avoid environmental pollution.

2.3 Cleaning, maintenance and storage:

- Turn off the system and unplug the adapter before cleaning the product;
- Wipe the product shell with a wet towel and dry it with a soft cloth;
- It is forbidden to clean with corrosive cleaning liquid;
- Do not immerse the product in water or other liquids;
- After cleaning, store in a dry, flat environment.

3. User use of the security statement:

Before you use this product, please read the following guidelines in detail and abide by these rules, which can increase the service life of this product and avoid danger or violation of the law.

Notes:

- To prevent the computer from overheating, make sure that the vents are not blocked;
- Do not press the display hard;
- Do not place the notebook on an uneven or unstable work platform;
- If you are travelling with a laptop, please bring it with a special bag;
- Do not use your laptop in harsh conditions;
- Do not place or drop objects on the laptop;
- Do not place the laptop under a magnetic field;
- Do not expose to direct sunlight;
- Do not use the notebook in an overheated or overly cold environment;
- Do not expose the computer to rain or dew;
- Do not place the computer on the edge of the fire source or other heat source;
- Do not fiddle with the battery and keep it out of the reach of children;
- Do not expose the notebook to dust or corrosive chemicals;
- Do not force off the notebook screen, or pinch the display to lift the computer;
- Do not spray water or other organic solvents directly onto the notebook display;
- It is strictly forbidden to use non-original batteries or other types of batteries, otherwise there will be a risk of explosion.

4. Troubles Shooting:

General issues can be resolved by following these steps:

- Turn off the laptop;
- Make sure that the AC power adapter is connected to the computer and the power supply socket is powered;
- Ensure that all external devices connected are connected, and you can also unplug these devices to avoid them becoming a possible source of error;
- Before opening or restarting the laptop, make sure that it has been turned off for more than 10 seconds, and check whether the boot sequence is normal;

5. Packing List:

- Quick start guide *1
- Adapter *1
- Notebook computer *1